 


Focusing the camera

For perfectly sharp images, **manually focus** the image. Set the focus switch on the lens to manual focus (MF). Then turn the focus ring on the lens to adjust the focus. For more accurate focus use the focus assistance functions - magnify and peaking.

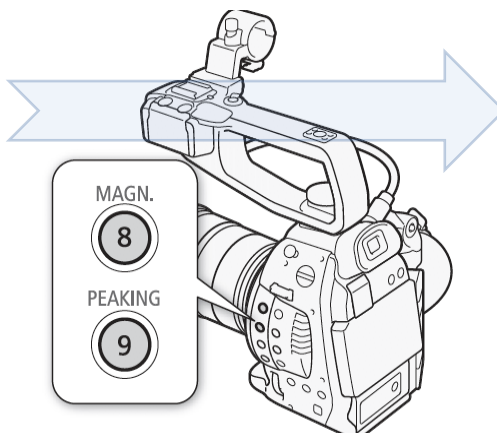 


Magnification enlarges the image so more detail can be seen and focusing is easier.

Peaking highlights the edges of subjects that are in focus to allow quick, accurate focusing.

Both tools can be used together.

To use **auto focus**, set the lens to AF and then press and hold 'One Shot AF'. The image will focus automatically and the AF frame will turn green.

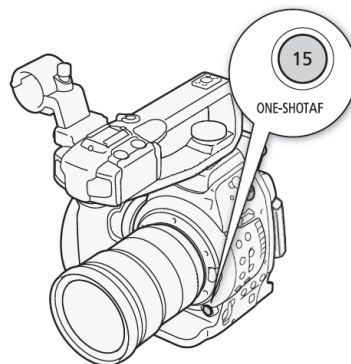

WFM gives access to a number of video scopes. The 2nd option is the **edge monitor** which shows the distribution of sharpness across the image. As sharpness increases a pattern of peaks appear across the bottom of the LCD.

